







What to do if...
What to do if...

	A tire punctures	P. 402	If you have a flat tire
	The engine does not start	P. 412	If the engine will not start
		P. 72	Engine immobilizer system
		P. 415	If the vehicle battery is discharged
	The shift lever cannot be moved out	P. 413	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 418	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 414	If you lose your keys
	The battery runs out	P. 415	If the vehicle battery is discharged
	The doors cannot be locked	P. 27	Side doors
		P. 32	Back door
	The horn begins to sound	P. 74	Alarm
	The vehicle is stuck in mud or sand	P. 420	If the vehicle becomes stuck



The warning light or indicator light comes on

P. 391

If the warning light turns on



nWarning lights



Brake system warning light

or



P. 391



Malfunction indicator lamp

or



P. 392



"ABS" warning light

or



P. 392



Driver's seat belt reminder light

P. 394



Front passenger's seat belt reminder light

P. 394



Low fuel level warning light

P. 394



Rear light failure warning light

P. 392



SRS warning light

P. 392



Low engine oil pressure warning light

P. 392



Open door warning light

P. 394



Tire pressure warning light

P. 394



Charging system warning light

P. 392



Automatic headlight leveling system warning light

P. 392



Automatic transmission fluid temperature warning light

P. 392



Low washer fluid warning light

P. 394



Dynamic laser cruise control master
warning light

P. 158



Engine oil replacement
reminder light

P. 394